



Wine Cooler

User Manual
Model: PS72082



- Read this manual carefully before using this product. Follow all warnings and instructions.
- Keep it for future reference.

Table of Contents

- Safety Precaution
- Feature
- Specification
- Installation instruction
- Operation
 - Storing wine bottle
 - Using product
 - Tips
- Cleaning and maintenance
- Troubleshooting

Safety Precaution

To prevent personal injury to others, or damage to property, read and follow these safety precautions carefully before use and place this product.

Warning

1. Do not immerse in water or pour water on the unit. Always shelter your unit from rain and snow.
2. Do not let children use the product lonely. Keep infants away.
3. Do not use flammable items such as gasoline, thinner or aerosol spray. Keep flammables away from unit.
4. Do not store medicine or items requiring precise temperature control.
5. This unit must not be disassembled, repaired or modified by anyone except the person authorized by manufacturer or an expert person.
6. Keep the unit far away from the direct sunlight whenever in using or not.
7. Do not operate the unit with a damaged cord or plug, or has been dropped or damaged in any manner. Return the unit to an authorized service facility for examination, electrical or mechanical adjustment, or repair. Before returning the unit, please call manufacturer's customer service telephone number first.
8. Do not use or install this unit in areas prone to dampness or where it may come in contact with water. This unit is not intended for use in bathrooms, laundry area and similar indoor locations.
9. The unit's power cord must be connected to a properly grounded, 115V electrical outlet. Plug into an exclusive grounded 3-prong outlet. Do not remove ground prong. Do not use an adapter.
10. Do not run the power cord under carpeting. Do not cover cord with

Advertencia


Con el fin de evitar lesiones personales, lesiones a terceros o daños a la propiedad, lea y siga estas precauciones de seguridad cuidadosamente antes de utilizar e instalar el producto.

Precaución de Seguridad

- Precaucion de Seguridad
- Caracteristicas
- Especificaciones
- Instalaciones de Instalacion
- Funcionamiento
- Almacenamiento de las botellas de vino
- Cómo utilizar el producto
- Consejos Practicos
- Limpieza y Mantenimiento
- Solucion de Problemas

Índice de Contenidos

- Lea el manual cuidadosamente antes de utilizar este producto. Siga todas las advertencias e instrucciones.
- Guarde lo para cualquier referencia del futuro.

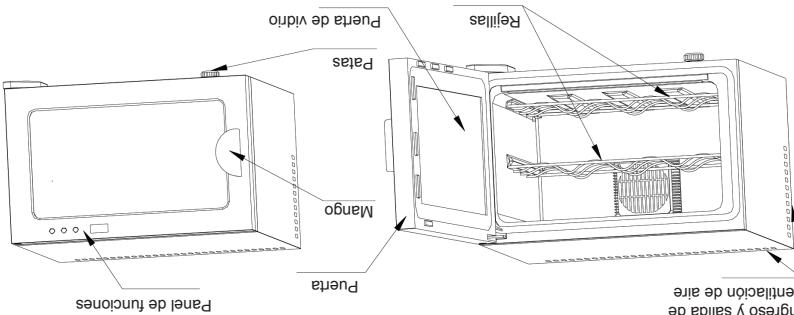


Características

8. No utilice ni instale en electrodoméstico en zonas húmedas o donde pueda entrar en contacto con el agua. El equipo no ha sido diseñado para utilizarse en baños, lavaderas o ambientes similares.
9. El electrodoméstico debe encuadrarse a un tomacorriente con la adecuada conexión a tierra de 115V. Conectelo a un tomacorriente de tres extremidades. No elimine la tercera extremidad. No utilice un adaptador.
10. No coloque el cordón debajo de una alfombra. No cubra el cordón con tapetes, pisos u otros materiales. Mantenga el cordón lejos de zonas de alto tráfico en donde al igual que se pierda tropiezares o donde el cordón pudiera sufrir daño.
11. Para desconectar, primero apague el aparato y luego proceda a desenchufar.
12. Evite el uso de un cable de extensión, el cual podría sobrecalentarse y causar el riesgo de que se produzca fuego. Sin embargo, si se necesita una conexión a tierra, utilice un cable de extensión que sea satisfactorio los requerimientos del Código de Electrodomésticos Nacionales, ANSI/NFPA 70.
13. Siempre desconecte el electrodoméstico antes de efectuar la limpieza, mantenimiento o de traslado.
14. Al momento de trasladar o guardar el electrodoméstico, mantenerlo en un área seca, libre de polvo, vibración excesiva u otros factores que puedan dañar el equipo.
15. El equipo puede resultar ser muy pesado después de colocar artículos en él interior. Al momento de moverlo o trasladarlo, es mejor vaciarlo primero.
16. No obstruya el ingreso o la salida de ventilación de aire en la parte posterior o lateral del electrodoméstico mientras se encuentre funcionando. No obstruir el motor del ventilador en el interior.
17. No abra o cierre la puerta fuertemente ya que se puede dañar la puerta misma, el vidrio de la puerta y el seguro de la puerta.

throw rugs, runners, or similar covering. Keep the power cord away from high traffic areas and where it will not be tripped over and be more likely to lead to a damaged cord.

11. To disconnect heater, turn all of the power switches off, then remove plug from outlet.
12. Avoid the use of extension cord, which may overheat and cause a risk of fire. However, if an extension cord must be used, the cord must be a three-wire cord, No.14AWG minimum size and rated not less than 1875 watts with a grounded plug.
- This extension cord should meet with the National Electrical Code, ANSI/NFPA 70.
13. Always unplug the unit when not in use.
- Always disconnect the unit from the power supply before performing any cleaning, maintenance, relocation the unit.
14. When transporting or storing the unit, keep it in a dry location, free from dust, excessive vibration or other factors, which may damage the unit.
15. Unit becomes heavy after storing item inside.
When moving or relocating the unit, it is better to empty the unit first.
16. Do not block the air inlet or air outlet vent in the rear or side of the unit when the unit is running. Do not insert foreign materials into the air inlet and air outlet because fan motor inside.
17. Do not open or close the door over-strongly, it will maybe damage the door, glass of the door, door latch, etc.

Features

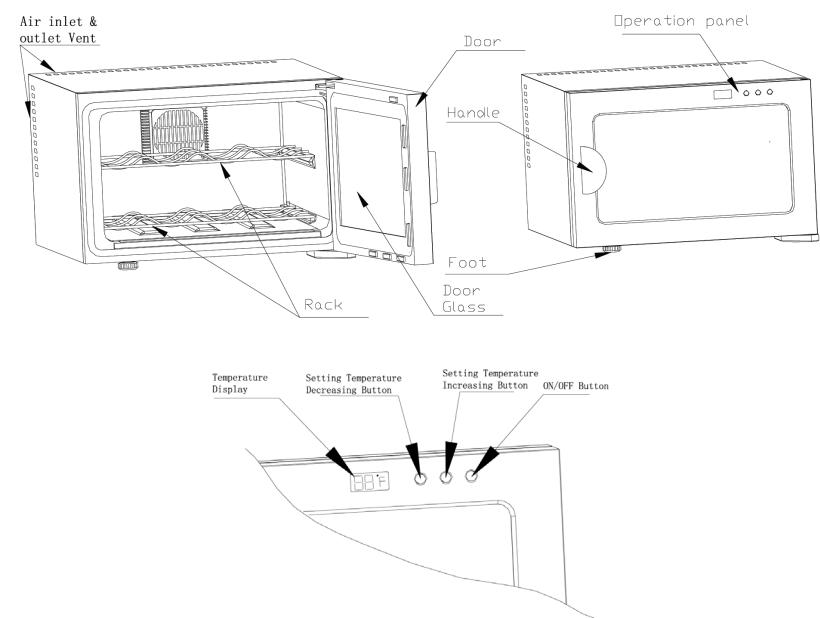

Specification

Voltage, Frequency, Phase	AC~115V/60Hz/1PH
Electrical Rating	0.85A
Color	Black/Argentine
Capacity	23 Liters/Max. 8 Wine bottle
Adjustable Lowest Temp	43 Fahrenheit
Net Weight(Approx.)	8Kg
Dimensions(H*W*D)(H)	

Installation Instruction

- Set the unit on a flat, solid surface with enough space in front to let the door be opened easily.
- Leave enough space around the unit. Do not place or install this unit in area where the ventilation or circulation ducts may become blocked. Make sure there are at least 6"/15 cm of space between the back of the unit and the wall. Keep a minimum distance of 4"/10 cm on each side of your unit free.
- Note:** Don't put the heavy weight on the unit, it will scratch the surface of the unit and damage it.
- Don't put the unit in the place with direct sunlight or having another hot source nearby, it will affect the cooling speed of the unit.
- Plug the unit into a properly grounded, 115 V electrical outlet.

Now the unit is waiting to run.

Operation

Storing wine bottle

The unit has two racks inside the cooling compartment. Each rack permit you place 4 wine bottles, so it can totally contain 8 wine bottles inside. When putting the wine bottle inside, let the lid of the bottle face out to take it easily. And don't place or operate it roughly. And put the wine bottle inside as possible to avoid the glass contact with the lid of the bottle. After this, close the door properly.

Using the product

- After putting the wine bottle inside the unit and plugging the power supply plug, then you can start the unit to run.
- Press the On/Off button on the control panel.
- Press Setting Temperature Decreasing Button or Setting Temperature Increasing Button to your desired temperature.
- Let the unit run continuously.

friamiento. Cada rejilla le permite colocar cuatro botellas de vino, de tal modo que se almacenan en el compartimiento de en-

Almacenamiento de las botellas de vino

- El equipo debe contar con la adecuada conexión a tierra. Utilice un tomacorriente de 115V.
- El equipo debe afectar la velocidad de aguja otra fuente de calor ya que esto puede afectar la velocidad del equipo.
- El equipo debe estar conectado en un lugar donde quede expuesto a la luz solar directa o cerca de alguna otra fuente de calor ya que esto pue-

dejar la superficie o dañarlo.
Nota: No coloque objetos pesados sobre el equipo ya que esto pue-

- entre la parte posterior del equipo y la pared. Mantenga libre una distancia mínima de 4" / 10cm en las partes laterales del electrodoméstico.
- asegúrese de que exista por lo menos 6" / 15cm de espacio libre entre los vias de ventilación y circulación se vean obstruidas. Coloque el equipo en una zona donde no esté expuesto a la temperatura ambiente.


2. Deje suficiente espacio alrededor del aparato. No coloque ni instale el equipo en la parte delantera para permitir la apertura de la puerta.

1. Coloque el equipo sobre una superficie plana y sólida con suficiente espacio en la parte delantera para permitir la apertura de la puerta.

Instrucciones de instalación

Voltaje, Frecuencia, Fase	AC 115V / 60Hz / 1PH
Resistencia eléctrica	0.85A
Color	Negro / Plateado
Capacidad	23 litros / Max. 8 botellas de vino
Temperatura	43°F
Peso neto aproximado	8kg.
Dimensiones (AxFxA)	

Especificaciones

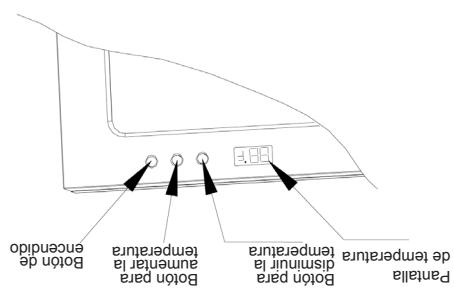

manera que el contenido total es de 8 botellas de vino.

Al momento de colocar una botella de vino en el interior, hágalo colocando la tapa o corcho mirando hacia la puerta de vidrio.

Al momento de colocar una botella de vino dentro del electrodoméstico y de haber encendido el aparato, este comenzará a funcionar.

Después de esto, cierra la puerta correctamente.

Después de esto, cierra la puerta de manera continua.

Presione los botones de temperatura ya sea para aumentar o disminuir hasta alcanzar la temperatura deseada.

Mantenga el aparato funcionando de manera continua.

Nota:

- Cierra la puerta correctamente. De lo contrario, la velocidad de enfriamiento se verá afectada.
- La luz indicadora se mantendrá encendida mientras el aparato se encuentra funcionando.
- La primera vez que se utilice el electrodoméstico, se debe esperar por lo menos de 4 a 6 horas de acuerdo a la temperatura de ambiente y de acuerdo a la temperatura inicial de la botella.
- Una vez que el interior del compartimiento ya la botella logren la temperatura adecuada, el electrodoméstico detendrá el enfriamiento y mantendrá la temperatura encendida de nuevo automáticamente para mantener una temperatura constante.

Desechue el aparato antes de proceder a limpiar o a efectuar el mantenimiento.

1. Para acelerar la velocidad de enfriamiento de los vinos, efectúe un enfriamiento previo de vino utilizando el refrigerador antes de colocar botella en el aparato durante un rato. No coloque la botella en la nevera ya que la botella podría romperse si el vino se congele.

2. No utilice hielo dentro del equipo. El agua que se produce del hielo derretido se desbordará fuera del aparato.

3. Durante el funcionamiento se produce forma dentro del equipo. La condensación es normal y no es una señal de desperfecto.

Como utilizar el producto

manera que el contenido total es de 8 botellas de vino.

Al momento de colocar una botella de vino en el interior, hágalo colocando la tapa o corcho mirando hacia la puerta de vidrio.

Al momento de colocar una botella de vino más tarde retirar más fácilmente. Hágalo con cuidado y delicadeza. Coloque la botella de vino lo más al fondo posible para evitar que la tapa o corcho de la botella tenga contacto con la puerta de vidrio.

Después de esto, cierra la puerta correctamente.

Consejos Prácticos

4. Mantenga el aparato funcionando de manera continua.

3. Presione los botones de temperatura ya sea para aumentar o disminuir hasta alcanzar la temperatura deseada.

2. Presione el botón de encendido en el panel de control.

1. Despues de colocar las botellas de vino dentro del electrodoméstico y de haber encendido el aparato, este comenzará a funcionar.

- Cierra la puerta correctamente. De lo contrario, la velocidad de enfriamiento se verá afectada.

- La luz indicadora se mantendrá encendida mientras el aparato se encuentra funcionando.

- La primera vez que se utilice el electrodoméstico, se debe esperar por lo menos de 4 a 6 horas de acuerdo a la temperatura de ambiente y de acuerdo a la temperatura inicial de la botella.

- Una vez que el interior del compartimiento ya la botella logren la temperatura adecuada, el electrodoméstico detendrá el enfriamiento y mantendrá la temperatura encendida de nuevo automáticamente para mantener una temperatura constante.

Note:

- Close the door properly. Otherwise it will affect the cooling speed.
- The light will always be on when the unit is running..
- When first using the unit, need you wait at least 4-6 hours according the room temperature around the unit and the initial temperature of the bottle.
- When the temperature inside the compartment and bottle attain the setting temperature, the unit will still run at low cooling speed and fan-motor at rear will working in order to keep the temperature at setting value.

Tips

1. To accelerate your wine cooler' cooling speed, pre-cool your wine bottle in your home refrigerator before placing them in the cooler for a short time, but not in freezing compartment because the bottle will break if the wine become ice.
2. Do not use ice inside the cooler. Water from melting ice will flow out of the unit.
3. Condensation will form in the unit during operation. Quickly wipe it any moisture the form inside the unit. And condensation is normal, not a sign of malfunction.

Cleaning and Maintenance

Unplug the wine cooler before cleaning or servicing your cooler.

1. All surface maybe cleaned with a small amount of dishwashing solution applied with a damp sponge or soft cloth. Do not over-saturate the sponge or cloth. Dry all water from inside cooler with a dry towel.
2. To prevent odors from accumulating inside the unit, leave the door open for several hours to let it emit out.
3. Never immerse the unit in water. Never wipe the unit using thinner, benzene or spray cleaners. Do not rub the unit with a scrubbing brush, cleaners, etc.

Troubleshooting

Problem	Possible Cause	Solution
	No power to the unit.	Main circuit breaker is tripped Too more appliance on this circuit, be sure that electrical supply for this unit is a separate circuit..... Check the circuit electrical capacity.
Unit does not run completely.	Main Power Supply switch is off.	Turn the main power supply switch to "ON" position.
	The unit is unplugged from wall outlet.	Plug the cord into an outlet.
	Power outlet for power plug prong is loose.	Check the power outlet and replace a new one.
	Power Cord or	Unplug it first, check one by

		Power plug is damaged.	one.
		ON/OFF button has not been pressed.	Press this button to start the unit.
		Maybe some problem happened inside the unit, like the fuse on the PCB has blown	Contact the service man by calling the service telephone number
Unit does not cool sufficiently	The unit has started just now or has run for only one or two hours.	Please wait more hour again because the unit has low cooling capacity itself	
	The wine bottle is too hot when being placed in.	Please wait more time again.	
	The door is not completely closed.	Close the door properly.	
	The unit is exposed to direct sunlight, is too close to a heat source, or is being operated in an excessively hot environment.	Relocation the unit.	
	The air inlet or outlet vent is obstructed.	Remove the blockage near the air inlet and outlet vent of the unit. Leave enough space around unit.	
	The door is being opened and closed too often.	We suggest that it better not open the door during first several hours of the working of the unit, and decrease the times of opening and closing the door.	
	The fan-motor in the cooling compartment or on the condenser side is not working.	Call the service man by service telephone number.	
	The thermoelectric module is bad.	Call service man to replace a new module.	

Desencharre el electrodoméstico antes de proceder a limpiarlo o hacerle mantenimiento.

- Se puede limpiar la superficie con un poco de líquido lavavajillas y una esponja o un paño suave. No humedezca la esponja o el paño demasiado. Squeeze el agua de la parte interna del electrodoméstico con una toalla.
- Para evitar malos olores acumulados en la parte interna, deje la puerta abierta durante algunas horas para permitir la ventilación.
- Nunca sumerja el equipo en agua. No lo limpie utilizando diluyente, benolina o aerosoles. No refriegue el equipo con una escobilla, limpiador, etc.

Limpieza y Mantenimiento